

Be sure to check out all the exciting products
Rush Creek has to offer. Visit our web site at:

www.triumphsportsusa.com



Warranty:

All of our products come with a three year warranty on all parts.

Manufacturer Defects:

Defective parts will be replaced at no cost to you. Please send an e-mail to cs@rushcreeklogfurniture.com including photos of the defective part(s) and we will send replacements. PLEASE NOTE: Cracks in logs are not defects. They may develop during the log drying process and do not affect the stability of the piece in any way, and add to the rustic appeal of your log furniture.

If your product needs service, please be advised that Rush Creek reserves the right to decline service when the product is found to be excessively worn, altered in any way, or when damage is caused by acts other than defective workmanship or materials. This warranty is void if the product has been subject to abuse. For service under this warranty, please contact Rush Creek. Please provide your receipt as proof of purchase.

Rush Creek

Rush Creek
West Allis, WI 53227
www.rushcreeklogfurniture.com
Rush Creek is a trademark owned by Triumph Sports USA
©2011 Triumph Sports USA. All Rights Reserved.

Item # 37-0004
#37-0010



Rush Creek™

STOOL



Item # 37-0004
Swivel Stool

Item # 37-0010
Fixed Stool

If you have any problems with your new product,
DO NOT RETURN IT TO THE STORE!
Please contact us at 1-866-815-4173,
or e-mail us at cs@rushcreeklogfurniture.com

Tools Needed For Assembly:

Screwdriver

Assembly Tips:

If you are using an electric screwdriver for assembly, set it at low torque and do not over-tighten the hardware.

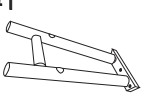
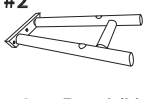
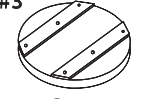
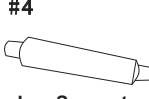


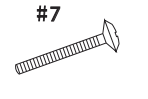
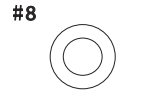

Care:

Apply lemon oil with a soft cotton cloth. Do not use products with silicone; these may cause damage to the finish. Do not allow the wood to come in contact with any type of paint remover.

CONNECTIONS:

Changes in temperature and humidity may cause the wood to dry out, which can cause the bolts to loosen. Check the bolts periodically to make sure they are still tight. DO NOT put your wood rack directly against hot radiators or other sources of heat. This may cause the wood to dry and crack.

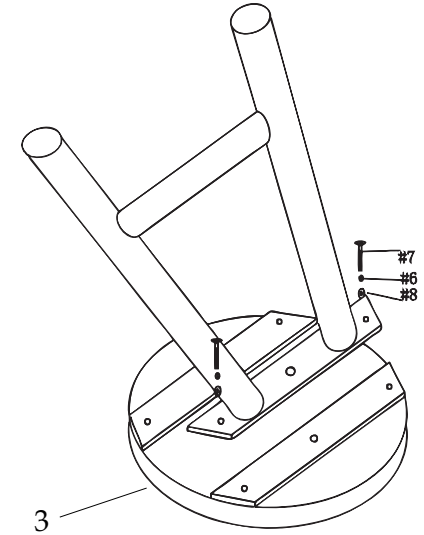
Chair Parts List

#1  Leg Panel (a) 1 Piece	#2  Leg Panel (b) 1 Piece	#3  Seat 1 Piece	#4  Leg Support 2 Pieces
#5  Wood Cap 4 Pieces	#6  1/2" Washer 10 Pieces	#7  Bolt 10 Pieces	#8  5/16" Washer 10 Pieces
#9  Chair Pads 4 Pieces			

WARNING: Do not completely tighten the screws until the stool base and leg supports are installed. Tightening too early may cause the holes not line up properly. Loosely assemble the entire stool before tightening.

Step 1

Lay seat (#3) up side down on a smooth soft surface. You'll notice that each leg panel has a letter that corresponds to each side of the seat. Match the letters. Align one leg pannel on top of the seat, using bolts (#7), 1/2" lock washers (#6) and 5/16" washers (#8) lightly tighten the two outside screws to the seat.

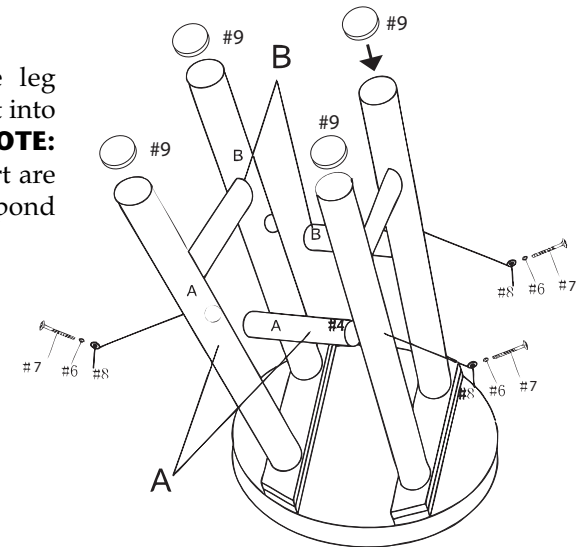


Step 2

Repeat the process in Step 1 for the other leg panel. Make sure to align the holes up.

Step 3

Brush the end point of the leg support (#4) with glue, Push it into the holes on leg panels. **NOTE:** Each leg panel and leg support are labeled A, B. Please correspond with stickers. See diagram.



Step 4

When the leg support is firmly fitted, attach bolts (#7), 1/2" lock washers (#6) and 5/16" washers (#8) to the leg panel.

Step 5

Use wood caps (#5) to fill the holes. Apply chair pads (#9) to the bottom of the stool legs, turn the stool over, and you're finished.