



*Rush Creek*TM

Steel Tip Dart Center




**If you have any problems with your new product,
DO NOT RETURN IT TO THE STORE!**

Please contact us at 1-866-815-4173,
or e-mail us at cs@rushcreeklogfurniture.com

MOUNTING INSTRUCTIONS

Install bumpers:

Attach three bumpers to the back of the dartboard using three nails. Each nail should be 7.5 in. (19.05 cm) from the center hole. This will prevent the board from moving during play.

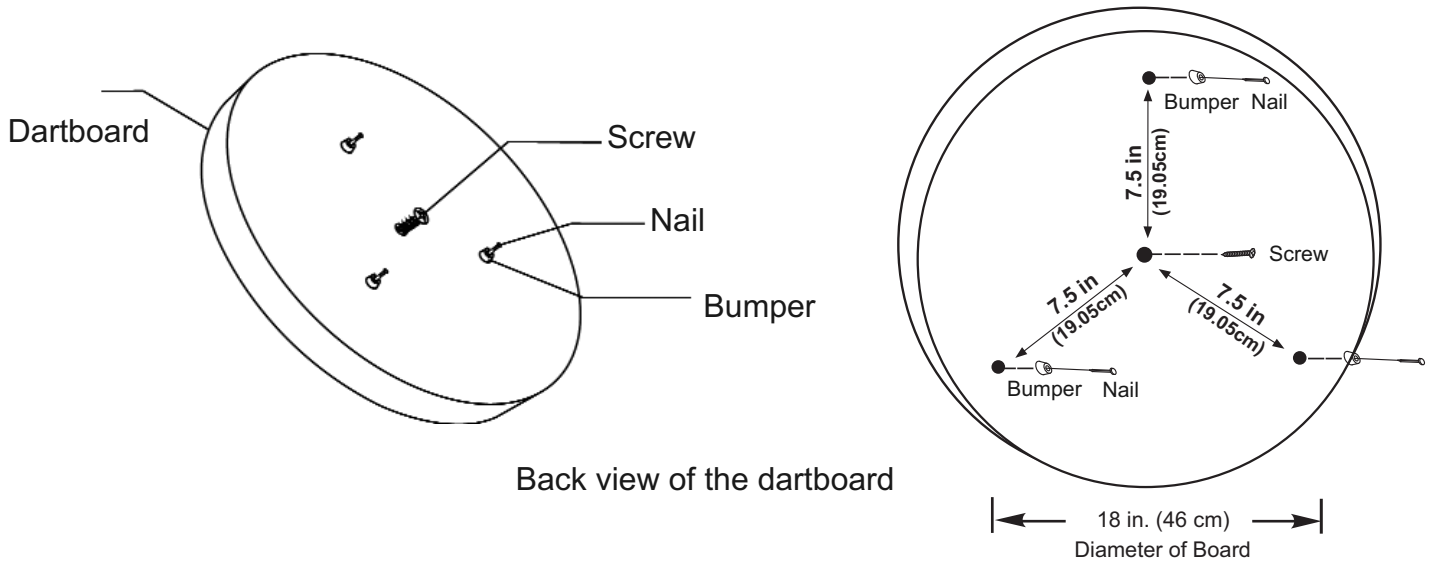


Install the mounting hardware:

Using the provided hardware, place the hanging bracket with its two holes directly over the pre-drilled holes on the cabinet. Using the screws, fasten the hanging bracket to the cabinet.

Turn the board around so the face is showing and the back of the board is facing the cabinet. Use the center screw on the back of the dartboard and slide it into the hanging bracket. **MAKE SURE THE CENTER SCREW IS SECURELY PLACED IN THE HANGING BRACKET.**

Use the provided screws to securely mount the cabinet to wall studs.

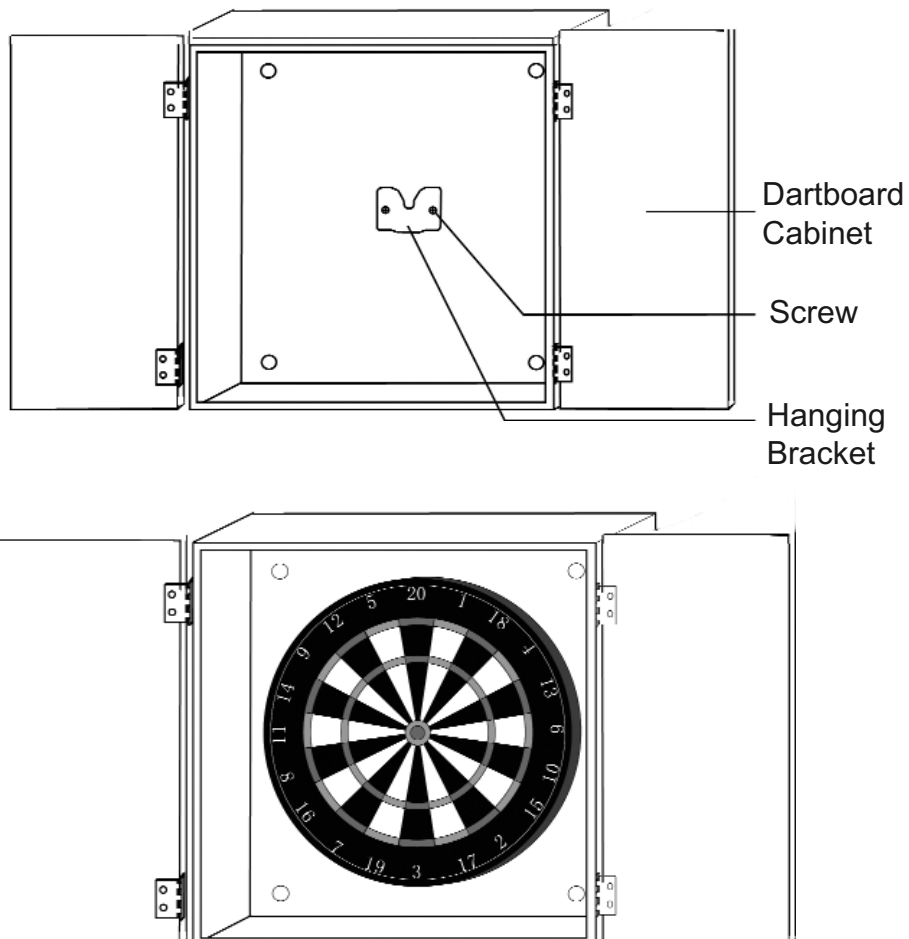

POPULAR GAMES

ROUND THE CLOCK

Players try to hit the numbers beginning at 1 and finishing at 20. The game advances for shooting the next number when the previous number is hit. The first player to reach and hit 20 wins.

CRICKET

Cricket allows players to utilize offensive or defensive strategies by allowing them to attempt to increase the score or block other players from scoring. The game is played with the numbers 15 through 20 and bullseye. Each player must mark a number three times to CLOSE it. A hit of a single number counts as one mark, a double counts as two marks, and a triple counts as three marks. After a number is closed, additional "markings" are converted in to scores equal to the hit. However, when a number is closed by all players (ALL CLOSED), scores do not accumulate when the number is hit. The winner is the player who closes all of the numbers first and has the highest score. If the scores are even, the player who has closed all the numbers first is the winner.

The X01

X01 is one of the most popular dart games, with 301 and 501 as the most common singles' games, and 701 or 1001 for teams. The object of the game is to count down from the starting number to exactly zero. The player who reaches exactly zero first wins the game.

Each player takes a three-throw turn subtracting the point value of their hits from the number (301, 501, 701, etc.) chosen at the start of the game.

The player must hit a number in the double's ring or a double bullseye to start the game, and finish the game with a double.

If the total score of the three darts in a turn exceeds the remaining score for that player or team, the player has busted and the score returns to what it was at the beginning of the turn.

A double bull counts as 50 and can be used to finish or start a game.

WARNING: THIS IS NOT A CHILD'S TOY. ADULT SUPERVISION IS REQUIRED FOR CHILDREN PLAYING DARTS. CONTAINS SMALL PARTS THAT ARE NOT APPROPRIATE FOR CHILDREN UNDER 3 YEARS OLD. PLEASE READ INSTRUCTIONS CAREFULLY. PROPER USE OF DARTS CAN PREVENT DAMAGE OR INJURY.

Be sure to check out all the exciting products *Rush Creek* has to offer.
Visit our web site at:

www.rushcreeklogfurniture.com



Warranty:

All of our products come with a three year warranty on all parts.

Manufacturer Defects:

Defective parts will be replaced at no cost to you. Please send an e-mail to cs@rushcreeklogfurniture.com including photos of the defective part(s) and we will send replacements. PLEASE NOTE: Cracks in logs are not defects. They may develop during the log drying process and do not affect the stability of the piece in any way, and add to the rustic appeal of your log furniture.

If your product needs service, please be advised that Rush Creek reserves the right to decline service when the product is found to be excessively worn, altered in any way, or when damage is caused by acts other than defective workmanship or materials. This warranty is void if the product has been subject to abuse. For service under this warranty, please contact Rush Creek. Please provide your receipt as proof of purchase.



Rush Creek
West Allis, WI 53227
www.rushcreeklogfurniture.com
Rush Creek is a trademark owned by Triumph Sports USA
©2011 Triumph Sports USA. All Rights Reserved.